

# HyperWare Restaurant Software

## Quick Reference Card

Optimum T4200 Series SPOS32, Version 2.0

**Note:** Printing a second receipt, the customer receipt, is an option for all transactions.

### Credit Sale

Terminal Display	Action
Enter Card Number or Swipe Customer Card	Swipe customer credit card through card reader or manually enter card number.
Enter Server Number	Enter server number, then press <b>Enter</b> .
Base Amount	Enter amount of sale, then press <b>Enter</b> .
Tip Amount	Enter Tip amount, then press <b>Enter</b> , or just press <b>Enter</b> and complete tip adjust later.
Total Correct?	Press Yes/ <b>Enter</b> to confirm, No/ <b>Clear</b> to change amount.
COMMS	Terminal dials host.
Response	Transaction is accepted and receipt is printed.
Approval	123456

### Debit Sale

Terminal Display	Action
Enter Card Number or Swipe Customer Card	Press <b>Enter</b> > <b>Transaction</b> > <b>Sale</b> > <b>Debit</b> .
Swipe Customer Card	Swipe customer debit card through card reader or manually enter card number.
Enter Server Number	Enter Server number, then press <b>Enter</b> .
Base Amount	Enter amount of sale, then press <b>Enter</b> .
Tip Amount	Enter Tip amount, then press <b>Enter</b> .
Total	Customer enters PIN on internal or attached PIN pad, then press <b>Enter</b> .
Enter PIN	Terminal dials host.
COMMS	Transaction is accepted and receipt is printed.
Response	123456

### Credit Refund

Terminal Display	Action
Enter Card Number or Swipe Customer Card	Press <b>Enter</b> > <b>Transaction</b> > <b>Refund</b> > <b>Credit</b> .
Swipe Customer Card	Swipe customer credit card through card reader or manually enter card number.
Enter Server Number	Enter server number, then press <b>Enter</b> .
Amount	Enter amount of refund, then press <b>Enter</b> .
COMMS	Terminal dials host.
Response	Transaction is accepted and receipt is printed.
Approval	123456

### Tip Adjust

Terminal Display	Action
Enter Card Number or Swipe Customer Card	Press <b>Enter</b> > <b>Batch</b> > <b>Adjust</b> .
Enter Invoice Number	Enter invoice number of original sale, then press <b>Enter</b> .
Base Amount	Enter tip amount, then press <b>Enter</b> .
Enter Tip	Touch Yes/ <b>Enter</b> to confirm adjusted total amount.
Total Correct?	Tip Adjust is complete.
Transaction Accepted	

### Server/Cashier Sign-On

Terminal Display	Action
Enter Card Number or Swipe Customer Card	Press <b>FUNCTION + 77 + Enter</b> , or press <b>Enter</b> > <b>Server</b> > <b>Add/Remove</b> .
Enter Server Number	Enter server number, then press <b>Enter</b> .
Sign-On? Y or N	Press Yes/ <b>Enter</b> to add this server number to terminal.
Transaction Accepted	Server Sign-On is complete.



# HyperWare Restaurant Software

## Open Tab

Terminal Display	Action
Enter Card Number or Swipe Customer Card	Press <b>Enter</b> > <b>Tab</b> > <b>Open</b> .
Swipe Customer Card	Swipe customer credit card through card reader or manually enter card number.
Enter Server Number	Enter server number, then press <b>Enter</b> .
Amount	Enter maximum open tab amount, then press <b>Enter</b> .
Total Correct?	Press Yes/ <b>Enter</b> to confirm, No/ <b>Clear</b> to change amount.
COMMS	Terminal dials host.
Response	Open tab is accepted and merchant receipt is printed.
Approval	123456

## Close Tab

Terminal Display	Action
Enter Card Number or Swipe Customer Card	Press <b>Enter</b> > <b>Tab</b> > <b>Close</b> .
Enter Invoice Number	Enter invoice number of Open Tab, then press <b>Enter</b> .
Correct?	Press Yes/ <b>Enter</b> if the Invoice Number is correct.
Total Correct?	Press Yes/ <b>Enter</b> to confirm, No/ <b>Clear</b> to change tab sale amount.
Transaction Accepted	Tab is closed and merchant receipt is printed.

## Void

Terminal Display	Action
Enter Card Number or Swipe Customer Card	Press <b>Enter</b> > <b>Batch</b> > <b>Void</b> > <b>Invoice</b> .
Enter Invoice Number	Enter invoice number, then press <b>Enter</b> .
XXXXXX Correct?	Press Yes/ <b>Enter</b> to void this transaction. Touch No/ <b>Clear</b> if this is not correct invoice number.
COMMS	Terminal dials host.
Transaction Accepted	Void is complete.

## Batch Report (Summary)

Terminal Display	Action
Enter Card Number or Swipe Customer Card	Press <b>REPORTS</b> button, then press <b>Summary</b> .
Scanning Batch	Terminal scans for batch totals and prints Summary report.

## Batch Report (Audit)

Terminal Display	Action
Enter Card Number or Swipe Customer Card	Press <b>REPORTS</b> button, then press <b>Audit</b> .
Host Number	Enter Host Number or 0 for all hosts.
Scanning Batch	Terminal scans for batch totals and prints Audit report.

## Reprint Last Receipt

Terminal Display	Action
Enter Card Number or Swipe Customer Card	Press <b>REPORTS</b> button, then press <b>Reprint</b> > <b>Last</b> .
Customer Copy	Press screen button next to <b>Customer Copy</b> or <b>Merchant Copy</b> .
Merchant Copy	Receipt is printed.



## World Headquarters

2851 West Kathleen Road  Phoenix, AZ 85053  
 602.504.5000  877.HYPERCOM within USA  Fax: 602.504.5166  
 E-mail: info@hypercom.com  web: www.hypercom.com  
 © Hypercom Corporation, 2007.